


Excel Hanging Kit Instructions

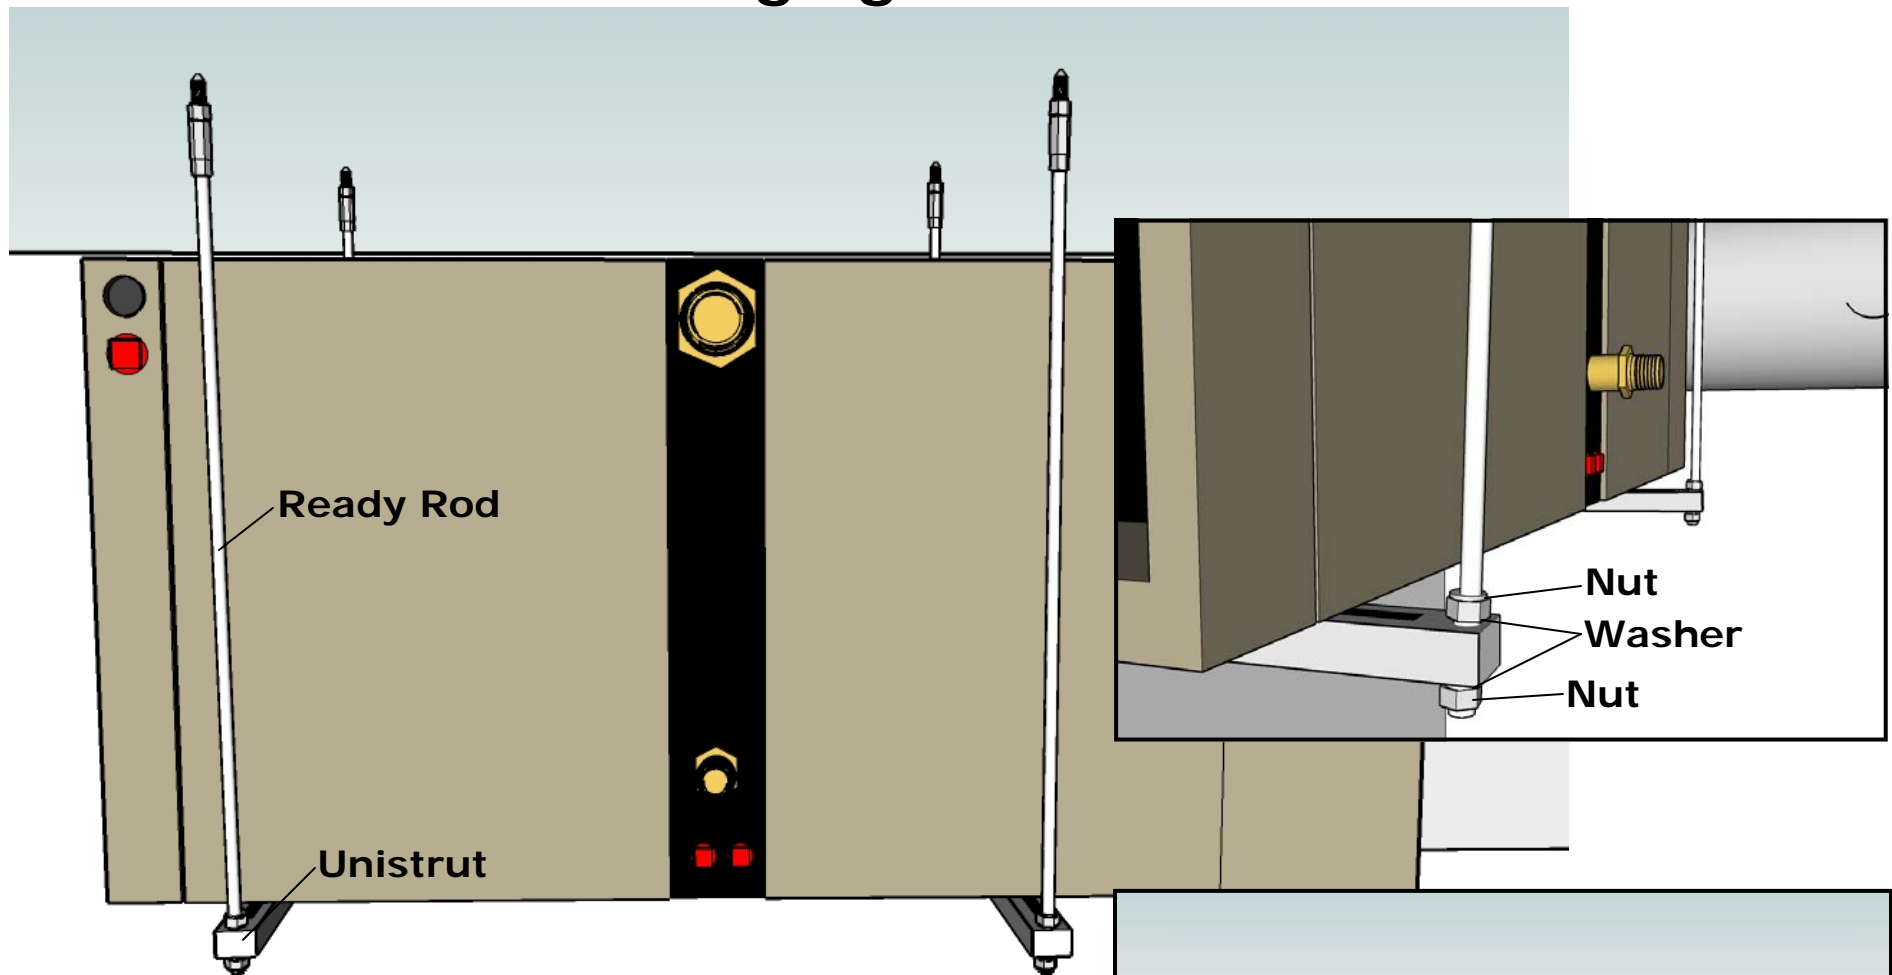

1. Attach hanger bolt to ceiling or joists unit will hang from. Tighten hanger bolt until securely fastened.
2. Take threaded ready rod and fasten one nut 1" down the ready rod. Fasten ready rod into hanger bolt until hand tight.
3. Using two small wrenches tighten both nut and hanger bolt together. Repeat steps 1-3 for all four lengths of ready rod.
4. Now attach one nut to the opposite end of the hanger bolt 1" from the bottom of the ready rod.
5. Now place a washer snug against the nut, followed by the unistrut bar, then washer and finally a nut. Repeat step 4-5 for opposite end of unistrut, which will now create large U Bracket.
6. Complete these steps for the other U Bracket. Rest Indoor Air Handler on hanging kit.

